

Limit Comparator Operation Instructions



Made in the
United States of America



Figure 1. EMIT 50424 Limit Comparator

Description

Frequency of re-calibration should be based on the critical nature of those ESD sensitive items handled and the risk of failure for the ESD protective equipment and materials. In general, EMIT recommends that calibration be performed annually.

Use the EMIT 50424 Limit Comparator to perform periodic verification (once every 6-12 months) of the Desco Combo Tester X3 and EMIT SmartLog Pro®. The Limit Comparator can be used to check the test limits of these testers without removing them from the factory floor.

The EMIT 50424 Limit Comparator is compatible with the following items:

Combo Tester X3	19270, 19271, 19287, 19288, 50774, 50775, 50779
SmartLog Pro® 2	50180, 50181

Packaging

- 1 Limit Comparator
- 2 Test Leads with Banana Plug Terminals, 1 ft. Length
- 1 RJ11 Foot Plate Cable

Tester Configuration

Combo Tester X3

The resistance limits for footwear and wrist strap tests are controlled by the DIP switches located on the sides of the tester. Use the following tables for the DIP switch settings and their corresponding test values.

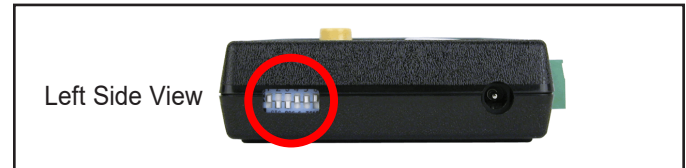


Figure 2. Locating the DIP switches on the Combo Tester X3

Footwear Resistance

DIP switches 1 and 2 control the HIGH test limit.

Switch 1	Switch 2	HIGH Limit Resistance
ON	ON	10 Megohms (1×10^7)
OFF	OFF	35 Megohms (3.5×10^7)
ON	OFF	100 Megohms (1×10^8)
OFF	ON	1 Gigohm (1×10^9)

DIP switches 3 and 4 control the LOW test limit.

Switch 3	Switch 4	LOW Limit Resistance
ON	OFF	100 Kilohms (1×10^5)
OFF	ON	750 Kilohms (7.5×10^5)

default setting

Wrist Strap Resistance

DIP switches 5 and 6 control the HIGH test limit.

Switch 5	Switch 6	HIGH Limit Resistance
OFF	OFF	wrist strap test disabled
ON	ON	10 Megohms (1×10^7)
ON	OFF	35 Megohms (3.5×10^7)

default setting

DIP switch 5 must be ON (default setting) for the wrist strap test to be active. The wrist strap test will be disabled if DIP switch 5 is set to OFF.

The LOW limit for the wrist strap test is set to 750 Kilohms and cannot be modified by the user.

SmartLog Pro® 2

Setting the Resistance Limits

1. Access the Admin Menu by entering an administrator ID number on the keypad. The default administrator ID number is 0.
2. Tap the ESD button.

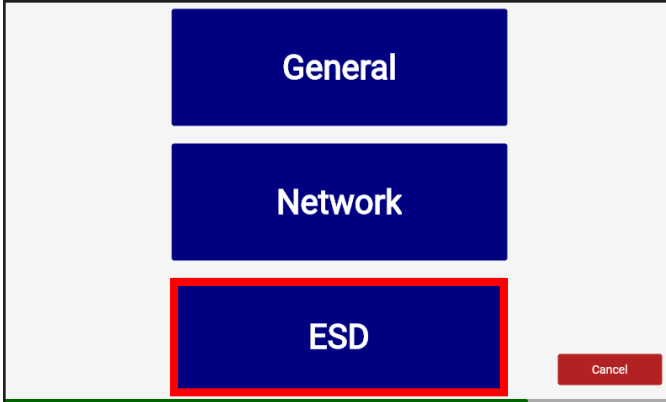


Figure 3. Locating the ESD button

3. The selected Wrist Strap and Footwear Limits can be found and adjusted at the bottom of the page. Tap the Save button when complete.

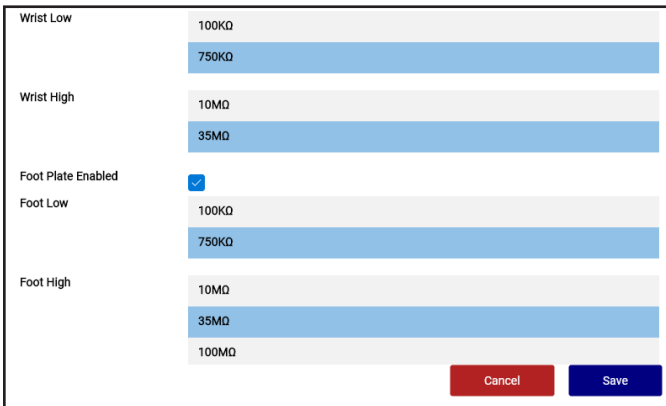


Figure 4. Selecting the test limits

SmartLog Pro® SE

Setting the Resistance Limits

1. Access the Admin Menu by entering an administrator ID number on the keypad. The default administrator ID number is 0.
2. Tap the ESD button.

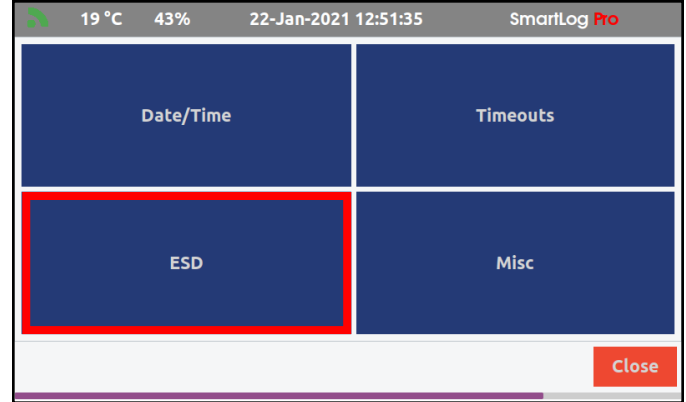


Figure 5. Locating the ESD button

3. The selected Wrist Strap and Footwear Limits can be found and adjusted at the bottom of the page. Tap the Save button when complete.

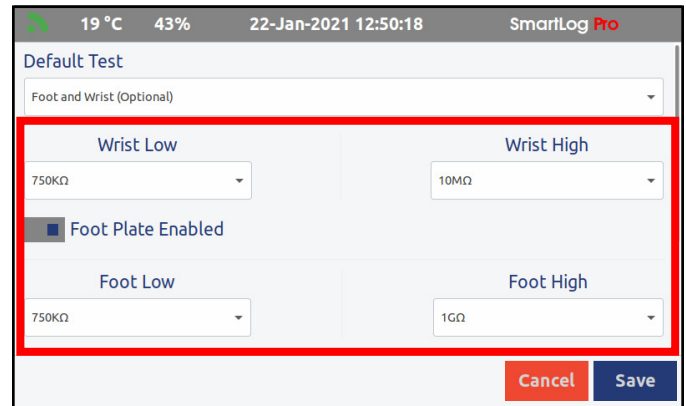


Figure 6. Locating the Wrist and Footwear test limits

SmartLog Pro® and Combo Tester X3 Plus

Setting the Resistance Limits

1. Access the Admin Menu by entering an administrator ID number and PIN on the keypad. The default administrator ID number and PIN are 0.
2. Tap the Preferences button.

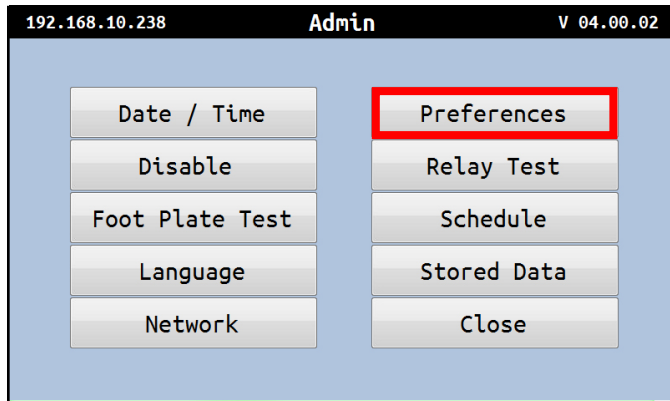


Figure 7. Locating the Preferences button

3. Tap the ESD Test button.

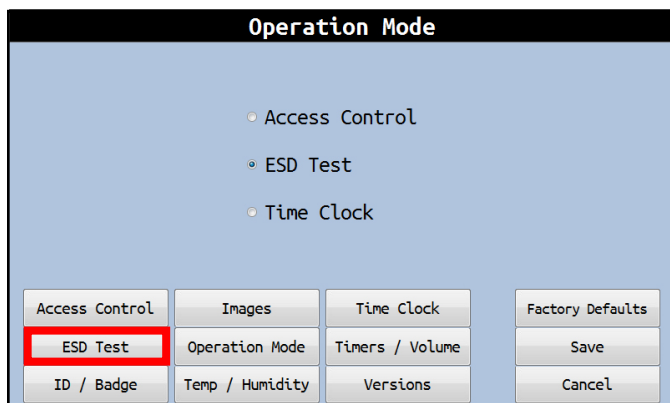


Figure 8. Locating the ESD Test button

4. Adjust the Wrist Strap and Footwear Limits by tapping the < and > buttons. Tap the Save button when complete.

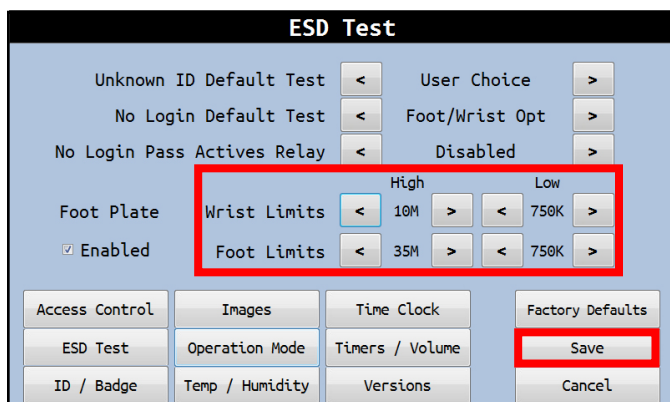


Figure 9. Locating the Wrist and Foot Limits

Operation

Combo Tester X3

Testing the Wrist Strap Circuit

1. Verify that the tester is connected to equipment ground.
2. Plug the two included test leads into each yellow banana jack located at the top of the Limit Comparator.
3. Connect one of the test leads from the Limit Comparator to the "SINGLE-WIRE" jack located on the face of the tester. Connect the other lead from the Limit Comparator to the ground jack located on the bottom of the tester.
4. Select "750K LOW" with the Limit Comparator's rotary switch.
5. Touch and hold the test switch on the tester until the results are displayed. The tester should indicate a wrist strap FAIL LOW condition.
6. Select "750K PASS" on the Limit Comparator and repeat the test. The tester should indicate a wrist strap PASS condition.
7. Select either the "10M PASS" or "35M PASS" setting, whichever one is appropriate, on the Limit Comparator and repeat the test. The tester should indicate a wrist strap PASS condition.
8. Select either the "10M HIGH" or "35M HIGH" setting, whichever one is appropriate, on the Limit Comparator and repeat the test. The tester should indicate a wrist strap FAIL HIGH condition.

Testing the Footwear Circuit

1. Insert the Limit Comparator's stereo plug into the jack labeled "FOOT PLATE" on the bottom of the tester.
2. Select the appropriate FAIL LOW setting on the Limit Comparator.
3. Touch and hold the test switch on the tester until the results are displayed. The tester should indicate a FAIL LOW condition for both feet.
4. Select the appropriate PASS LOW setting on the Limit Comparator and repeat the test. The tester should indicate a PASS condition for both feet.
5. Select the appropriate PASS HIGH setting on the Limit Comparator and repeat the test. The tester should indicate a PASS condition for both feet.
6. Select the appropriate FAIL HIGH setting on the Limit Comparator and repeat the test. The tester should indicate a FAIL HIGH condition for both feet.

SmartLog Pro® and Combo Tester X3 Plus

Testing the Wrist Strap Circuit

1. Verify that the tester is connected to equipment ground.
2. Plug the two included test leads into each yellow banana jack located at the top of the Limit Comparator.
3. Connect one of the test leads from the Limit Comparator to the "SINGLE WIRE" jack located on the face of the tester. Connect the other lead from the Limit Comparator to equipment ground.
4. Select "750K LOW" with the Limit Comparator's rotary switch.
5. Touch and hold the test switch on the tester until the results are displayed. The tester should indicate a wrist strap FAIL condition.
6. Select "750K PASS" on the Limit Comparator and repeat the test. The tester should indicate a wrist strap PASS condition.
7. Select either the "10M PASS" or "35M PASS" setting, whichever one is appropriate, on the Limit Comparator and repeat the test. The tester should indicate a wrist strap PASS condition.
8. Select either the "10M HIGH" or "35M HIGH" setting, whichever one is appropriate, on the Limit Comparator and repeat the test. The tester should indicate a wrist strap FAIL condition.

50784 5-Pound Electrode

Pair the Limit Comparator with the EMIT 50784 5-Pound Electrode to verify the calibration of the footwear circuit in the Combo Tester X3 Plus and SmartLog Pro®. The electrode provides a method to load the resistance from the Limit Comparator onto each plate of the dual foot plate.



Figure 10. EMIT 50784 5-Pound Electrode for Limit Comparator

50784 Packaging

- 1 5-Pound Electrode
- 2 Test Leads with Banana Plug Terminals, 5 ft. Length
- 1 Alligator Clip

Testing the Footwear Circuit

1. Plug the two 5 ft. test leads into each yellow banana jack located at the top of the Limit Comparator.
2. Connect one of the test leads from the Limit Comparator to the 5-pound electrode. Connect the other lead from the Limit Comparator to equipment ground. Use the included alligator clip if desired. Leave the Limit Comparator's stereo plug disconnected from the tester.
3. Place the 5-pound electrode on top of the left foot plate.
4. Select the appropriate FAIL LOW setting on the Limit Comparator.
5. Touch and hold the test switch on the tester until the results are displayed. The tester should indicate a FAIL condition for the left foot.
6. Select the appropriate PASS LOW setting on the Limit Comparator and perform a test. The tester should indicate a PASS condition for the left foot.
7. Select the appropriate PASS HIGH setting on the Limit Comparator and perform a test. The tester should indicate a PASS condition for the left foot.
8. Select the appropriate FAIL HIGH setting on the Limit Comparator and perform a test. The tester should indicate a FAIL condition for the left foot.
9. Place the 5-pound electrode on top of the right foot plate.
10. Perform the same FAIL LOW, PASS LOW, PASS HIGH and FAIL HIGH tests and verify the results for the right foot.

Specifications

Resistance Values:

Setting	Nominal Resistance	% Tolerance of Nominal Resistance
100K LOW	90K	±2%
100K PASS	110K	±2%
750K LOW	675K	±2%
750K PASS	825K	±2%
1M LOW	909K	±2%
1M PASS	1.10M	±2%
10M PASS	9.09M	±5%
10M HIGH	11.09M	±5%
35M PASS	31.09M	±5%
35M HIGH	37.89M	±5%
100M PASS	90.9M	±5%
100M HIGH	112.9M	±5%
1G PASS	812.9M	±10%
1G HIGH	1.213G	±10%

These resistance values may be verified using a digital voltmeter by setting it to read Ohms (Ω). Connect your voltmeter's test leads into each of the Limit Comparator's yellow banana jacks. If any value is out of specification, the Limit Comparator must be returned to the manufacturer for repair.

Operating Temperature	50 to 95°F (10 to 35°C)
Environmental Requirements	Indoor use only at altitudes less than 6500 ft. (2 km) Maximum relative humidity of 80% up to 85°F (30°C) decreasing linearly to 50% @ 85°F (30°C)
Dimensions	3.8" L x 2.4" W x 0.9" H (97 mm x 61 mm x 23 mm)
Weight	0.2 lbs (0.1 kg)
Country of Origin	United States of America

The EMIT 50424 Limit Comparator may also be used with the following discontinued items:

Combo Tester X3	19278, 19279, 99031, 99032, 99033, 99034, 222566, 222567, 222568, 222569
Combo Tester X3 Plus	19265
Dual Independent Tester	50404, 50407, 50413, 50562
SmartLog V5™	50766, 50767, 50768, 50769, 50772, 50773
SmartLog Pro®	50780, 50781, 50782, 50721, 50722, 50723
SmartLog Pro® SE	50170, 50173, 50174

Limited Warranty, Warranty Exclusions, Limit of Liability and RMA Request Instructions

See the EMIT Warranty - DescoEMIT.com/Warranty.aspx